



F2D Titan

Film to Digital Converter

User Manual v1.0

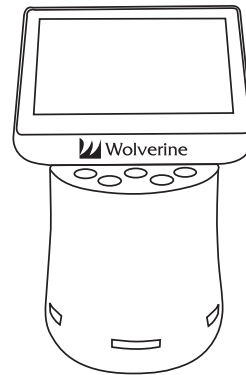


Table of Contents	
Introduction ...	1
Before Using the Converter ...	1
Having Difficulty Using This Product ...	4
Package Contents ...	5
Ordering Accessories ...	5
Functions of Keys ...	6
Connect F2D Titan to TV Screen ...	7
Getting Started... 8	
1. Attach Power ...	8
2. Use Built-in Memory ...	8
3. Use Optional SD/SDHC Memory Card ...	8
4. Format/Delete All Internal Memory or the SD/SDHC Card ...	9
5. Mode Selection ...	10
6. Set Film Type ...	11
7. Select Film Adapter or/and Insert ...	12
Film Type/Film Adapter/Insert Table ...	13

8. Clean Film Dust and Insert Proper Adapter into Slot ...	14
9. Prepare Film and Feed the Film into Adapter ...	15
10. Edit Image Orientation ...	17
11. Change Image EV (Exposure Value) and RGB Color ...	17
12. Convert Film to Digital File ...	19
13. Playback Converted Image Files ...	20
14. Connect F2D to Computer to Upload Image Files ...	22
15. Upload Image Files to PC and Delete the Uploaded Files ...	23
Specifications ...	24
One-Year Limited Warranty (United States Only) ...	25
Thank You for Choosing Wolverine and Quick Start ...	Back Cover

Introduction

Thank you for purchasing **Wolverine F2D Titan Film to Digital Converter**. You can take stacks of film and convert them into digital images to preserve them forever. This Wolverine simple-to-use device converts your film into high quality digital images in seconds, no computer or software is needed. Plug the F2D Titan into an outlet or an USB port; all images are saved to internal memory or optional SD/SDHC memory card. The F2D Titan can be connected to your Windows PCs or Mac computer system to upload converted and saved digital images through USB ports.

Before Using F2D Titan

This section provides important safety information that you should read before using your F2D Titan.

- Do not drop or handle too aggressively as it may cause damage to the device.
- Do not allow the device to come into contact with water or other liquids. In the event that water or liquids enter the interior,

turn off the device immediately, continue using the device may result in fire or electric shock.

- Do not handle the device with wet hands. Doing so may cause electric shock and damages to the unit.
- Do not place the device close to any equipment that generates strong electromagnetic fields. Exposure to strong magnetic fields may cause malfunction or data corruption.
- Do not expose the device to extreme temperatures, humidity or vibrations, which may cause damages to the device.
- Do not open the outer casing. This unit does not require batteries nor contain user serviceable parts.
- Do not move or disconnect the device from power source or computer while the device is reading/writing data. This may cause damages to the data and/or the device.
- Under no circumstances should user try to repair the device. Doing so may cause electric shock and void the warranty.
- Warranty will be voided if the device is mishandled. Please take care in handling the device. Wolverine Data is not responsible for

2

consequential damages, including loss of data. Always back up all data. For full warranty statement see the end of this manual.

- Wolverine Data has no obligation to repair, replace or issue refunds without a Return Merchandise Authorization (RMA) number and the original purchase receipt of the defective product.
- Repairs or replacement service will not be offered to products that were misused, scratched, repaired without authorization, or any other reasons beyond the range of intended use.
- Replacement product may be either new or refurbished, provided that its functions are at least equal to that of the product being replaced.
- Wolverine Data is not responsible for any data stored on the returned product, please backup any data prior to ship back the unit.
- All out-of-warranty repairs are subjected to repair fee. Please contact your dealer or Wolverine Data for current charges.

3

Having Difficulty Using This Product

Please try the following options:

- Call us at 949-458-9888 M-F 9:00-5:00 Pacific Time
- We strongly recommend you to visit our web site, **www.wolverinedata.com/support** to watch videos including:
 1. F2D Titan **video manual**
 2. Easy way to open the F2D negative adapter
 3. How to convert 8mm / Super 8 film and recreate the movieE-mail or write to our technical support staff at
- support@wolverinedata.com or
our address: 9939 Muirlands Blvd. Irvine, CA 92618

4

Package Contents

F2D Titan converter
35 mm slide adapter (#1)
35 mm negative adapter (#2)
110 negative insert (#4)
110 slide insert (#5)
8mm/Super8 insert (#6)
USB power adapter
USB cable
Cleaning brush
User manual


Ordering Accessories

Please call us at **949-458-9888** or visit Wolverine Data web site to order accessories. Go to **www.wolverinedata.com**, click **Accessories** under the pull down menu of tab **PRODUCT**, click **Wolverine F2D**. Select **HDMI** cable or other related accessories.

5

Functions of Keys

- **Power:** Power on/off.
- **Left/Mirror and Right/Flip:** Highlight the selection to left/up or right/down; mirror or flip image in "Convert" mode.
- **Convert/Mode:** Convert film to digital image in "Convert" mode. Press Mode key one time to bring back the previous menu. **Press Mode key twice any time to go back to Home Menu** (start menu).
- **OK/Enter key:** Confirm and enter the selection

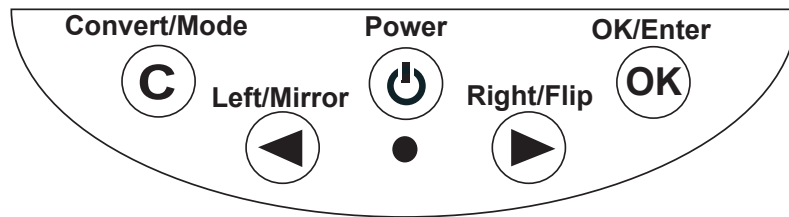

6

Connect F2D Titan to TV Screen to View Images on TV

If your TV set equipped with HDMI port, you can view converted images on TV screen instead from the F2D Titan viewer.

Plug HDMI cable (optional item) to HDMI port located at the back of F2D Titan, and a HDMI port of your TV set. Change your TV set INPUT / SOURCE to HDMI 2 or HDMI 3. The viewer of the F2D Titan will turn dark, menu and images will appear only on TV.

7

Getting Started

1. Attach Power

Connect the included cable to the included power adapter. Plug the power adapter to a wall outlet, or plug cable to computer USB port directly. F2D Titan turns itself off after 30 minutes of idle time.

2. Use Built-in Memory

F2D Titan has built-in memory that can store about 35 ~ 40 digital images. After power on, a "No card" icon will appear on the viewer for 3 seconds if no external memory card is inserted.

3. Use Optional SD/SDHC Memory Card


Insert a SD/SDHC memory card (**Max. 32 GB**) before power on the F2D Titan. **Do not use SDXC or MicroSD memory card with card adapter** on F2D Titan. It might freeze the device.

Ensure the card is unlocked, gently insert it with **gold fingers facing up until it clicks**. Power off the F2D Titan before removing the memory card. Eject the card by gently pushing in the card, instead of pulling out directly.

8

A new memory card or an used camera card should be formatted before using with the F2D Titan. Refer to item 4.

Each 1 GB of SD/SDHC memory holds about 500-700 digital images. The maximum accepting capacity of a SD/SDHC Memory Card is **32 GB**, otherwise it will freeze the F2D Titan.

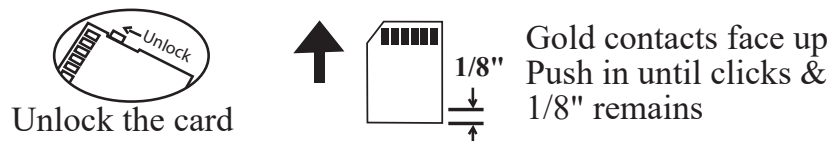

4. Format/Delete All Internal Memory or SD/SDHC Card

This function formats/deletes all files stored in the internal memory if SD/SDHC memory card is not inserted. With external memory card inserted, the function of "Delete All" will erase all files on the inserted card. Caution, any and all existing files would be deleted after the procedure of "**Delete All**". Make a backup if it's needed.

1. Insert SD/SDHC memory card if needed.
2. Turn power on, press **Right** key to select **Delete All** then press **OK**.
3. Press **Left** key to highlight **YES** then press **OK**.

9

5. Mode Selection

F2D Titan has 7 modes and are listed below. Press **Left** or **Right** keys to change the mode then press **OK/Enter** key to execute the selection. You can always press **Mode** key to bring back the previous menu or press **Mode** key twice to go back to **Home** menu.

- **Film Type** - Selects type of film to convert, refer to **Film Type Table** on page 13
- **Delete All** - Deletes all files in the internal memory or the inserted SD/SDHC card
- **Convert** - Converts film to digital image. You can go to Convert mode directly if all settings remained the same as last session
- **Playback** - Reviews all converted images that stored in memory
- **USB Upload** - uploads converted image files to PC or Mac
- **Language** - Sets menu in English or Japanese


10

6. Set Film Type

Ensure the **Film Type** setting is correct, or you will see X-ray-like image on the viewer. The film type setting will remain unchanged even when F2D Titan is powered off.

1. At **Film Type** menu, press **OK/Enter** key.
2. Press **Left** or **Right** key to highlight **Slides Positive** or **Color Negatives** or **Movie Positive** or **Black & White** then press **OK**.
3. Press **Left** or **Right** key to select the type of film then press **OK**.

Slides	35mm Slides	110 Slides	110 Slides	126 Slides	127 Slides
Mount	2" x 2"	2" x 2"	1" x 1"	2" x 2"	2" x 2"
Film size	24mm x 36mm	13mm x 17mm	13mm x 17mm	28mm x 28mm	40mm x 40mm

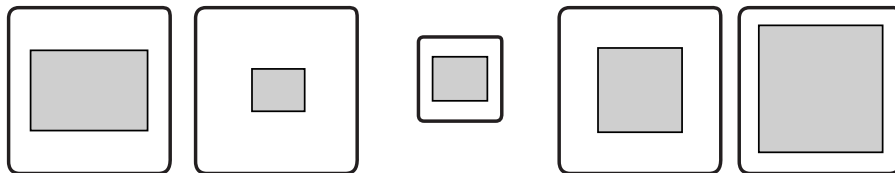


11

7. Select Film Adapter or/and Place Insert

Use proper Adapter or/and Insert to convert your film, refer to **Film Type/Film Adapter/Insert Table** on page 13.

Flip open the proper Adapter then place the Insert into the middle of window opening, align the 4 dimples underneath (see page 12). Snap close all 3 catches along the bottom edge tightly to avoid jamming when pushing adapter into the F2D Titan.

Warning: Using wrong Film Adapter or/and Insert will result cropped or black areas on images.

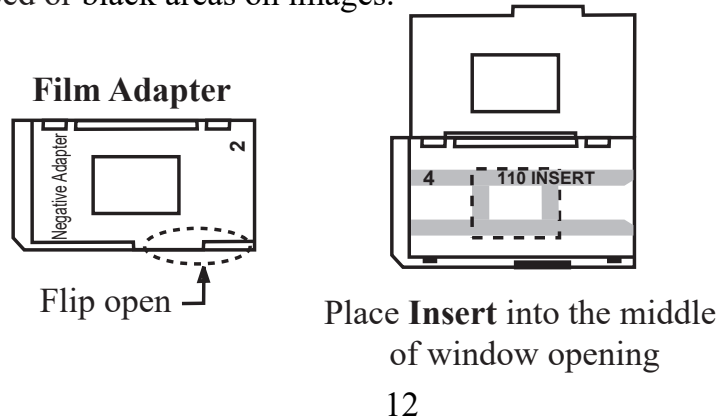

12

Film Type/Film Adapter/Insert Table

Film Type	Format	Film adapter & number	Insert & number
Slide Positive	127VPK	Slide Adapter (1)	---
	135	Slide Adapter (1)	---
	126KPK	Slide Adapter (1)	---
	110	Slide Adapter (1)	110 Slide Insert (5)
Color Negative	Microfiche	Slide Adapter (1)	---
	127VPK	Negative Adapter (2)	---
	135	Negative Adapter (2)	---
	126KPK	Negative Adapter (2)	---
	110	Negative Adapter (2)	110 Insert (4)
	APS	Slide Adapter (1)	110 Slide Insert/APS (5)
Black & White	127VPK	Negative Adapter (2)	---
	135	Negative Adapter (2)	---
	126KPK	Negative Adapter (2)	---
	110	Negative Adapter (2)	110 Insert (4)
Movie Positive	Super8	---	8mm/Super8 Insert (6)
	8 mm	---	8mm/Super8 Insert (6)

13

8. Clean Film Dust and Insert Proper Adapter into Slot

For best results, use included cleaning brush with felt side down to wipe dust off the light table gently before inserting adapter.

Slide Adapter or Negative Adapter:


Insert the Adapter with the embossed wording facing up. Gently push the adapter from the right side slot, **right to left**, until stopped.

8mm/Super8 Insert:

Insert it with the embossed wording facing up. Gently push the Insert from front to back until stopped.

APS:

1. Place Slide Insert (#5) in Slide Adapter (#1)
2. Insert the Adapter into Titan.

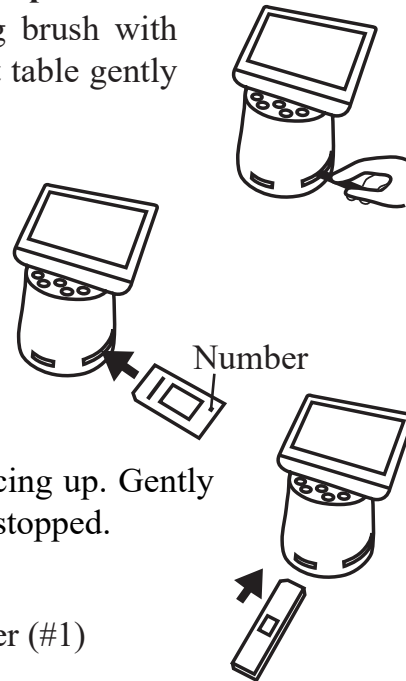


14

9. Prepare Film and Feed the Film into Adapter or Insert

Use fine soft cloth or canned air (not included) to wipe or blow off any dust on the film before feeding them into the Adapter. Gently feed the film from the right side of adapter.

In general, feed the film in right side up, and **shiny side up**.

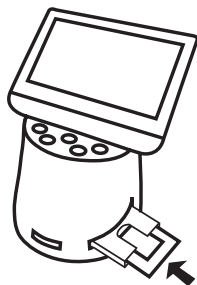

Slides:


1. Put Slide Adapter (#1) into F2D Titan.
2. Feed slides with **shiny side up** or printed logo/brand name facing down.
3. Feed slides one by one. Use second slide and third slide to push the preceding ones until image align properly on the viewer before converting.

Note: Ensure the Film Type setting is correct, or you will see X-ray-like image on the viewer. The film type setting will remain unchanged even when power off. For detail process, please go to our web site to view our **video manual**, refer to web site info on page 4.

15

Negative:

1. Put Negative Adapter (#2) Insert into Titan.
2. Feed negative film and check the image from the viewer and adjust position accordingly.

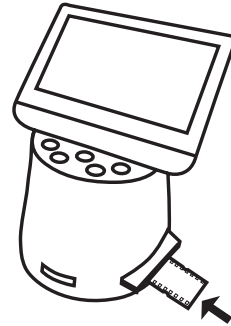

Negative/APS

APS:

1. Place Slide Insert (#5) in Slide Adapter (#1).
2. Insert the Adapter into Titan.
3. Feed APS film and check the image from the viewer and adjust position accordingly.


Note:

You can go to YOUTUBE

(www.youtube.com/watch?v=MniXz1VvoYc) to watch the video on **how to get your negatives out of an APS cassette.**

8mm/Super 8:

Insert the film with perforated holes on the right side. Go to www.wolverinedata.com/support to watch the video of **Converting Super 8 Movies into Digital.**

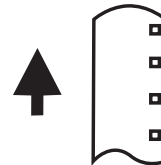

10. Edit Image Orientation


At Convert Mode, press **Mirror** key to mirror the image **left to right**, or **Flip** key to flip the image **upside down**.

11. Change Image EV (Exposure Value) and RGB Color

At Convert Mode, press **OK/Enter** key to change **EV** (Exposure Value), **R** (red), **G** (green), and **B** (blue) color components. The default value of EV is 0.0, change to positive(+) to make image brighter, or negative(-) to make image darker.

You can also adjust Red, Green, and Blue color components to enhance the image color of the film. Press **Left or Right** key to adjust the values, then press **OK/Enter** key to move on to the next color component. The edited value will remain unchanged until further adjustments were made.


Note: Each brand or batch of film development process used different chemicals and have their own characters. You can make adjustments individually, or upload image files to a computer to do batch enhancements with a software.

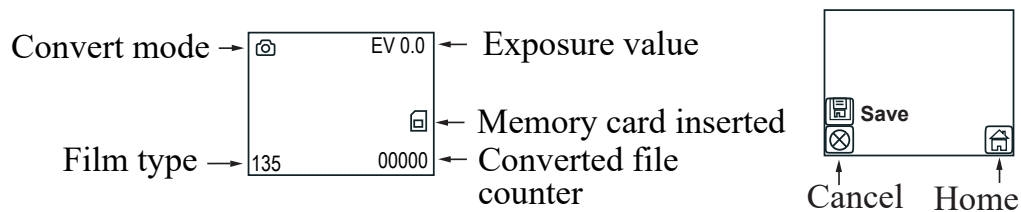

12. Convert Film to Digital File

1. At Convert Mode, press **Convert** key to convert image to digital.
2. Press **OK** key to save the converted digital image to memory. Or press **Left or Right** key to select **Cancel** (not saved).
3. Feed another picture from right side to left side to convert the next film.

Note: If a red rectangle "FULL" icon appears in the center of the viewer, it means the memory is full. Upload the picture files to computer, refer to item 14 and 15 on page 22 and 23. Then delete all files in the memory with computer software wizard or F2D Titan, refer to item 4 on page 9.

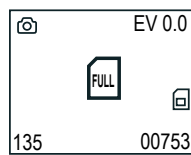

Memory Full


13. Playback Converted Image Files

1. Press **Left** or **Right** key to highlight "**Playback**".
2. Press **OK/Enter** key to playback saved files on the viewer at 2 second intervals.

Playback Mode




Playback in Pause

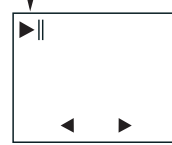

3. Press **OK/Enter** key to pause slide show. Press **Left/Right** key to advance image forward or backward manually.
4. Press **OK/Enter** key one more time to go to **Playback** menu.

20

5. In the **Playback** menu, highlight **Exit**, then press **OK/Enter** key to resume **Playback**. Or highlight **Delete** icon to erase the picture file. Or highlight **Home** icon, press **OK/Enter** key to exit **Playback** mode, or press **Convert** key two times to go to Home menu.

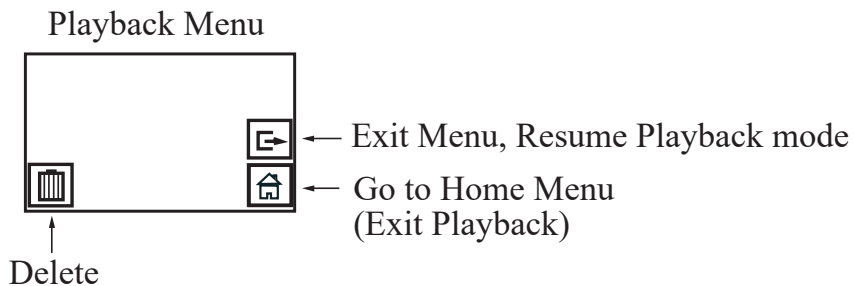


21

14. Connect F2D Titan to Computer to Upload Image Files

For people who don't have a card reader on computer, you can use F2D Titan as an external card reader for your computer.

1. Plug small end of the USB cable to F2D Titan and the big end to USB port on the computer.
2. Insert SD/SDHC memory card if not using the internal memory.
3. Power on F2D Titan.
4. Press **Left/Right** key to highlight "USB UPLOAD".
5. Press **OK/Enter** key to activate the USB mode.

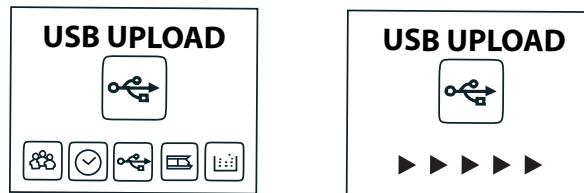

22

15. Upload Image Files to PC and Delete the Uploaded Files

You can use F2D Titan as an external card reader to upload converted image files. It's a better practice to upload files to different folders each time.

MAC system:

iPHOTO will pop out. If not, launch iPHOTO and import the files.

Windows PC system:

A Microsoft Wizard Window will pop out. Follow the steps to copy picture files to your PC.

All converted image files will be named in alpha-numerical order, such as PICT0001.JPG, PICT0002.JPG, PICT0003.JPG etc, and stored under the directory of **DCIM/100PHOTO**.

After files were copied to your computer, you can delete the files on the memory card using functions on the computer, or F2D Titan **Delete All** function.

23

Specifications

Lens: F/3.48, f=5.12

LCD: 4.3" TFT LCD

External memory: SD/SDHC card

Exposure: Auto

Color balance: Auto

Resolution: 20 MP

Data conversion: 24 bits per color channel

Convert method: Single pass

Light source: LED backlight

Power: Powered from USB/5V adapter

Interface: USB 2.0

Dimension: 115 x 99 x 169 mm

Weight: 390 g

Language: English and Japanese

Caution: This device complies with part 15 of the FCC Rules. Changes of modifications not expressly approved by Wolverine Data could void the user 's authority to operate the equipment.

One-Year Limited Warranty (United States Only)

Wolverine Data manufactures its hardware products from parts and components that are new or equivalent to new in accordance with industry-standard practices. Wolverine Data warrants that the hardware products it manufactures will be free from defects in materials and workmanship. The limited warranty term is one year beginning on the date of invoice, as further described in the following text.

Damage due to shipping the product is covered under this limited warranty. Otherwise, this limited warranty does not cover damage due to external causes, including accident, abuse, misuse, problems with electrical power, servicing not authorized by Wolverine Data, usage not in accordance with product instructions, failure to perform required preventive maintenance, and problems caused by use of parts and components not supplied by Wolverine Data.

The warranty extends only to the first consumer purchaser, and is not transferable. This limited warranty does not cover any items that are in one or more of the following

categories: software; external devices (except as specifically noted); accessories or parts added to a Wolverine Data system after the system is shipped from Wolverine Data or its resellers; accessories or parts that are not installed in the Wolverine Data factory. During the one-year period, beginning on the invoice date, Wolverine Data will repair or replace products returned to Wolverine Data's facility.

To request limited warranty service, you must contact Wolverine Data within the limited warranty period. Appropriate telephone number for customer assistance refer to page 4. If limited warranty service is required, Wolverine Data will issue a RMA (Return Material Authorization) number. You must ship the product back to Wolverine Data in their original or equivalent packaging, prepay shipping charges, and insure the shipment or accept the risk of loss or damage during shipment. Wolverine Data will ship the repaired or replacement products to you freight prepaid if you use an address in the continental United States, where applicable. Shipments to other locations will be made freight collect.

To obtain service, you must include: (a) a copy of your receipt or other comparable proof of purchase; (b) a written description of the problem; (c) your address and telephone number; (d) Write the RMA number on the outside shipping packaging.

NOTE: Wolverine Data uses new and reconditioned parts made by various manufacturers in performing limited warranty repairs and building replacement products. If Wolverine Data repairs or replaces a product, its limited warranty term is not extended.

Warranty Exclusions

Normal Wear and Tear

Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Abuse and Misuse

Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the products or accessories for commercial purposes or subjecting the product or accessory to abnormal usage or conditions; or (d) other acts which are not the fault of Wolverine Data, are excluded from coverage.

Use of Non-Wolverine Converter's Accessories

Defects or damage that results from the use of Non-Wolverine Converter's accessories or other peripheral equipment are excluded from coverage.

Unauthorized Service or Modification

Defects or damages resulting from service, testing, adjustment, instillation, maintenance, alteration, or modification in any way by someone other than Wolverine Data are excluded from coverage.

Altered Products

Product or accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Wolverine Data parts or accessories, are excluded from coverage.

Other Limitations

Any implied warranties, including without limitation the implied warranties of merchantability and fitness for a particular purpose, shall be limited to the duration of this limited warranty, otherwise the repair, replacement or refund as provided under this express limited warranty is the exclusive remedy of the consumer, and is provided in lieu of all other warranties, express or implied. In no event shall wolverine data be liable, whether in contract or tort (including negligence) for damages in excess of the purchase price of the product, accessory or software, or for any indirect, incidental, special or consequential damages of any kind, or loss of revenue or profits, loss of business, loss of information or data, software or application with the ability or inability to use the product, accessories or software to the full extent these damages may be disclaimed by law. Some states (or jurisdictions) do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion or limitation may not apply to you.

28

Thank you for choosing Wolverine

Please call us at **949-458-9888** M-F 9:00-5:00 Pacific Time or watch **video manual** at www.wolverinedata.com/support

Quick Start

1. Attach power /USB cord to F2D Titan
2. Insert SD/SDHC memory card - Optional step
3. Turn on F2D Titan
4. Press **Left or Right and OK** keys to set film type
5. Insert **Film Adapter & Insert** from right side slot
6. **Feed** film into the Film Adapter from right side
7. Edit image orientation, EV, or RGB if required - Optional steps
8. Press **Convert** key to convert image to digital
9. Press **OK** key to save image to memory
10. **Feed** in the next picture, repeat converting process



Join our Mailing List to receive our exclusive coupon offers